

Use of the Kitchen at Wantage Primary Academy

WPA have blessed us by allowing us to use their equipment in their kitchen. This is to let you know what that equipment is and how to use it. If you have any questions or problems then please let Andy White know and he will either attempt to answer them or pass them on to the school.

Serving Counters

When inside the kitchen, the right-hand counter can be heated. To provide power to this use the rotary yellow and red switch between the two counters.

Heating of the space under the heated counter is controlled by the switch and temperature dial on the front of the counter to the left of the cupboard doors.

The infrared lamps above the counter are controlled by the switch and dial at the left-hand end above the counter.



Heated Counter Power Switch



Infrared Lamp Controls



Cupboard Controls

Dishwasher

Turn it on using the left-hand button on the control panel, which is located under the sink drainer. This is to the left of the display panel, which will light up green. It will then automatically fill with water and heat up. You don't need to add anything.

Baskets are located to the right of the dishwasher, under the worksurface.



Control Panel

Fridges

These are on all the time. Just use them as you wish.

Oven and Hob

The gas needs to be turned on for us by the school caretaker, so we need to let him know in advance if we wish to use the Oven and Hob. **Please let Andy White know at least a week before you need to use the oven and/or hob so that he can communicate this to the school.** Thank you!

Turn on the Gas Safety System and the Kitchen Ventilation located by the door to the back of the school.

Turn the key in the Gas Safety System to ON. Rotate the knob on the Kitchen Ventilation to LOW SPEED.

Wait for the Gas On indicator light to illuminate.



The rings on the hob need to be lit using the gas lighter that is stored above it.

The oven is lit using the red ignitor button to the right of the row of knobs. Press it in to click to make sure that the gas is lit, then hold the button in for a while until the gas stays lit when you let it go.

Note: the oven and hob will only work when the Gas Safety System is indicating Gas On.



Before leaving the kitchen

When you have finished using the kitchen, please make sure that everything is turned off. Note that for the dishwasher this involves pressing the left-hand round button on the control panel.